

Showering Machine instruction manual

STEP 1

Insert the main body panel into the connection part of the main body tray and assemble.
Connect the hose to the submersible pump. Attach and secure it to the corner of the main body tray with the suction cups at the bottom.

STEP 2

1. Connect the white cord under the main body tray to the "LED power cord (LED电源)".
2. Connect the tip of the submersible pump cord to the "Pump power cord (水泵电源)".

STEP 3

1. Insert the AC adapter into the "The power plug (电源插头)" on the upper left of the back of the main unit panel and connect it.
2. Put enough water in the main body tray so that the submersible pump can be submerged.


Insert the AC / DC adapter into an outlet and turn on the power switch on the side of the main unit to operate the machine.



Submersible pump

Power input: AC12V Power: 5W

Hydraulic head: 1.5-2.0M Flow rate: 500L / H

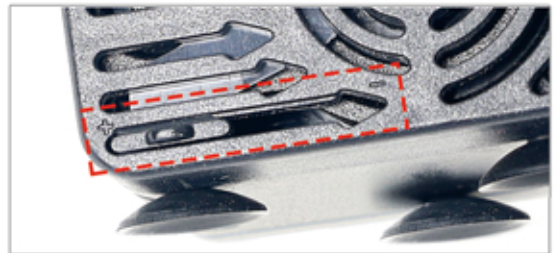

Precautions

At the first use, water may not come out due to the accumulation of air in the nozzle. In that case, please try the following instructions.

- Adjust each valve on the front of the nozzle.
- Please make sure that the assembly is completed according to the procedure in this manual and the power switch is turned on.
- If water does not come out from the nozzle, please make sure that there is enough water in the tray for the submersible pump to be submerged.

Note: If the amount of water is insufficient even after adjusting the valve at the front of the nozzle to the maximum, you can adjust the amount of water with the motor in the submersible pump.



AC / DC adapter

Power input: AC100-240V (50 / 60Hz)

Output: AC12V 3A DC